 
## 1. Part Name & Accessories

Please check if all the camera and accessories are included in the package.




# **Junction Box Manual Bullet** Camera

### **Quick Manual**

Ver. 1.1 / 2021.02

Before installing and using the Camera, please read this manual carefully. Be sure to keep it handy for future reference.

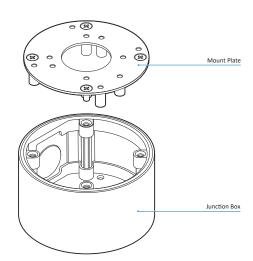







Manual







1,2 Mount Screw

3 Mount Screw

Screw & Plastic Anchor-4pcs


Mount Point 3 Installation Ø78

Mount Template

ø78


# 2. Installation

#### Mounting Junction Bracket to Template

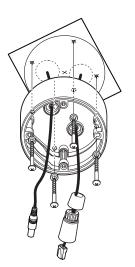



1 Seperate the Mount Plate and Grommet.

 - 2 Remove the rubber stick blocking the holes in the grommets.
- 3 After passing through the cable, refer to Figure Grommet, Grommet Replace the back.



  Installation Method Without RJ45 Connector (Recommended)






- 4 Please position the Junction Bracket according to the Mount Template.
- S After insert waterproof rubber O-ring to the mount screw, fix 4 points on the mount hole.
- 6 Connect the cable.

0


- Arrange the cables in a junction box.
- 8 Connect mount plate to Junction Bracket.
- 9 Attach the camera to the Mount Plate with the Mount Screw.

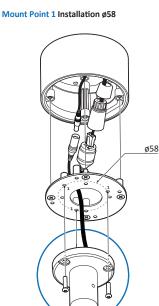

Mount Point 2 Installation Ø53

[ Mount Plate ]

 ø53



[ Compatible Accessory Bracket ]

BP01



BCO01

MOUNT POINT 1 Ø58 X3 HOLE MOUNT POINT 2 Ø53 X4 HOLE MOUNT POINT 3 Ø78 X4 HOLE

☑ Lan Cable thickness ø5.0 ~ ø8.0mm. Benting the cable can cause water leakage.