

# Inceiling Bracket Manual Indoor / Outdoor IR PTZ Camera


#### **Quick Manual**


Ver. 1.0 / 2020.09

Before installing and using the Camera, please read this manual carefully. Be sure to keep it handy for future reference.


## 1. Accessories & Dimension

☑ Please check if all the camera and accessories are included in the package.

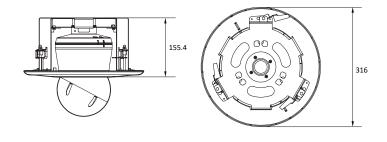


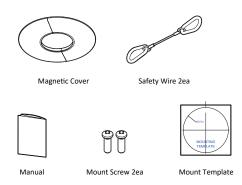

#### 2. Part Name

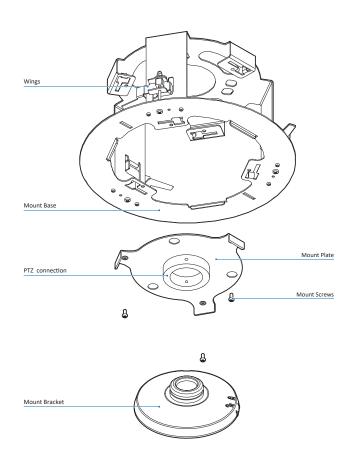


### 3. Disassemble the bracket

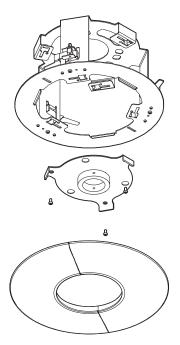


- 1 Detach the magnetic cover from the Mount Base.
- 2 Loosen the 3 mounting screws and remove the mounting plate.
- **3** After removing the mounting plate, start the installation.
- There should be as few structures as possible at the place of installation.
- Use a tilt angle of 20° or more.

# 4. Installation

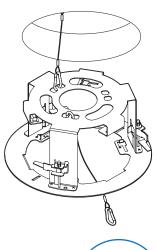

 - 1 Using the template sheet, make the hole on the wall.
- 2 After installing the safety wire, also install the camera connection wire. Insert the inceiling bracket into the hole.






After connecting the Satety wire with Mount Plate, insert the LAN cable. Hang the Mount Plate on the lower part of the Mount Base and fix it with a screw. After connecting the LAN cable, check the Mount Point and rotate the camera to complete assembly.


4 After disassembling the PTZ, turn the Mount Plate and Mount Bracket to fasten it, then fix it with 2 screws

enclosed as an accessory.

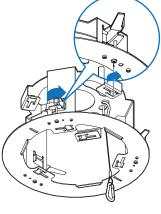


Upper Part

6 Move the Mount Plate hanging on the lower part of the Mount Base to the upper part and fix it with a screw.

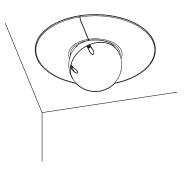

Lower Part

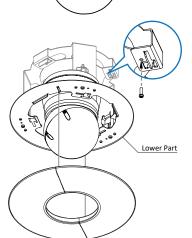

Attach the magnet cover according to the point.