

10M HD IP Dual Sensor Mini Vandal Dome Camera

Quick Manual

Ver. 2.0 / 2022.10

Before installing and using the camera, please read this manual carefully. Be sure to keep it handy for future reference.


ipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Into equipment has been tested and found to comply with me limits for a class A logical device, pursuant to part 15 or the PCL.

Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the userwill be required to correct the interference at his

To disconnect power from the mains, pull out the mains cord plug. When install the product, ensure that the plug is easily

1. Product & Accessories

Please check if all the camera and accessories are included in the package.

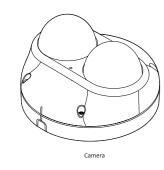















Test Video Cable

Safety Information

e instructions are intended to ensure that the user can use the product correctly pid danger or property loss.



WARNINGS: Serious injury or death may be caused if any of these warnings are neglected.

POWER

- Use only standardized adapters written in the manual. Incorrect connection of the power source can cause fire, electric shock, or failure.
- If there is smoke or a strange smell from the power source, disconnect the power immediately and contact the service center or purchasing office. If you continue to use it as it is, it can cause fire and electric shock.
- Disconnect the power plug from the outlet before connecting to the power terminal block.


INSTALLATION

- Install it according to the temperature and humidity environment suitable for the product specifications. Otherwise, it can cause fire and electric shock
- Thunder and lightning can cause problems with the camera. When installing, be careful to minimize damage caused by lightning such as grounding.
- Do not place conductive materials (drivers, coins, metal sticks, etc.) and water-filled containers on the camera. It causes injuries caused by fire, electric shock, and falling.
- If you want to move the installed product, turn off the power and move it or reinstall it. Otherwise, it can cause fire and electric shock.
- Do not install it in places where there is a lot of moisture, dust, soot, etc. It causes fire and electric shock.
- Avoid places where direct sunlight comes in or where heat comes out, such as heating appliances. It causes fire and electric shock.

CLEANING

Do not spray water directly on each part of the product when cleaning. It causes fire and electric shock.

2. Part Name

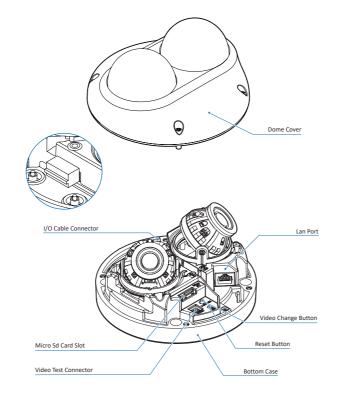



CAUTIONS: Injury or equipment damage may be caused if any of these cautions are neglected.

POWER

- Use the power line after fixing it firmly to the power connection terminal. Incomplete connection can cause a fire.
- Do not extend the adapter output cable. If you need to install the power cable extension, please contact the service center.
- Use insulated power for PoE connected external power.

- It is recommended not to touch the lens when installing the product as the factory ships with a focus adjustment completed during the manufacturing completion
- Avoid installing cameras facing bright lights like sunlight. Causes damage to the image sensor
- Make sure it safe and securely when installing camera on the wall or ceilling. This can cause injury by the fall.
- Do not connect multiple cameras to one adapter. Excess capacity causes abnormal
- Wear protective gloves when installing /uninstalling the camera. This causes burns caused by high temperature on the surface of the product.
- Don't drop or shock the product. Please stay away from places where vibration is severe or magnet types are present.
- Install it in a well-ventilated place. This can cause fire and failure.


CLEANING

Wipe the contaminated surface with a clean, soft, dry cloth or wet the soft, dry cloth to prevent water from flowing, then wipe the contaminated area.

3. Disassemble the camera


Before installing your camera, you have to read the following cautions.

- 1. You have to check whether the location can bear five times of the weight of your camera.
- 2. Don't let the cable to be caught in improper place or the electric line cover to be damaged. Otherwise it may cause a breakdown or fire.
- 3. When installing your camera, don't allow any person to approach the installation site If you have any valuable things under the place, move them away.

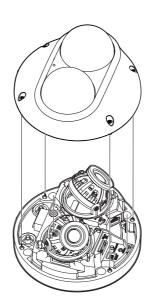

 Detach the dome cover by tory wrench provided from bottom case.

4. Installation

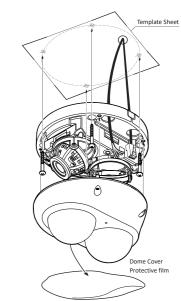

Installation and Use Precautions

Do not disassemble the camera at your discretion.

product is installed, or if it can be generated.

cause fatal damage to the surface of the product.

any foreign substance, wipe it with a soft cloth.

purchase a new Micro SD card.

according to the manual.

heat such as sunlight, fire, etc.

The battery (battery pack or equipped battery) must not be exposed to excessive

If you forcefully install the product with excessive force, malfunction can damage

Do not punch or shake the camera and be careful not to damage the camera with

Installing or using the product in water can cause serious product failure.

Do not install the product if there is chemical or vapor in the place where the

Be careful not to get chemicals on the surface of the product when installing the

product. Chemical solvents such as cleaning agents and adhesive components can

Do not install it near the kitchen or cooking table as edible oil such as soybean oil

can also cause product damage and deformation. It can cause product damage.

Be careful not to get foreign substances on the Micro SD card terminal. If there is

Moisture may occur in the glass of the camera when the new product box is opened (or when the product is initially running). The generated moisture is removed by a

Data will not be saved at the end of the life of the Micro SD card. In this case,

Gore vent attached to the camera within hours of the power connection.

Use only with cart, stand, tripod, bracket, or table specified

Unplug this apparatus when a cart is used. Use caution when


moving the cart/apparatus combination to avoid injury from

by the manufacturer, or sold with the apparatus.

For products enclosed with a desiccant or card-type absorbent, please install it

Be careful not to install the camera in a rainy or humid place, and do not leave it in a

- 1 Disassemble the camera. See the section 'Installation - Disassemble the camera' for details.
- 2 Using the template sheet, make the cabling hole on the wall/ceiling.
- 3 Pull wires through and make all necessary connections. See the section 'Installation - Cabling' for
- 4 Fix the bottom case on the ceiling.
- 5 To achieve desired view direction and orientation, rotate 3-axis gimbal To fix the setting, tighten the tilt stopper screw.
- 6 Attach the dome cover to the bottom
- Detach the protection film from the dome cover.

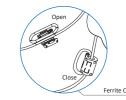

◯ Use of Ferrite Core


Installing the ferrite core to a LAN cable is highly recommended to reduce high frequency noise level.

- 1. Open the ferrite core by lifting the clin
- 2. Make one loop with the cable through ferrite core.
- 3. Close the ferrite core to hold the cable loop into its place.



If the product is not functioning properly or damaged, contact the service center or purchasing office.

5. Installation Using Accessory Bracket

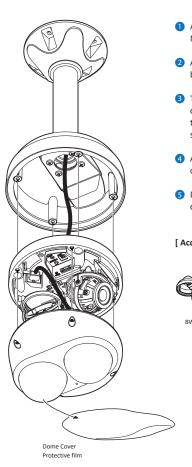

- 1 Attach the Bottom case to selected Mount Bracket.
- 2 Assemble the bottom case and bracket.
- 3 To achieve desired view direction and orientation, rotate 3-axis gimbal. To fix the setting, tighten the tilt stopper
- 4 Attach the dome cover to the bottom
- 5 Detach the protection film from the dome cover.

[Accessory Bracket]





6 Select the network type.

1 The default network type of the camera is DHCP mode.

1 If you have a DHCP server, it will

If you do not have a DHCP server,

7 Input IP setting information when the

Subnet Mask: 255.255.255.0

network type is set to STATIC.

Default TCP/IP information

- Gateway: 192.168.1.1 DNS: 168.126.63.1

- IP: 192.168.1.80

utomatically set the Camera IP.

Camera IP is set to 192.168.1.80





6. Adjusting the Camera Angle

Note: Adjust the lens angle and insert the desi-pak before closing the dome cover.



Desi-Pak (Moisture Absorber)

When installing, unseal the vacuum-packed Desi-Pak and install it in the marked position. When inserting or removing Desi-Pak, be careful as it may be torn if you use a pointed tool.


Able to delete an Active-X which is

Active-X.


installed when accessing to Web

You don't need the function because this

camera use the VLC plugin instead of the

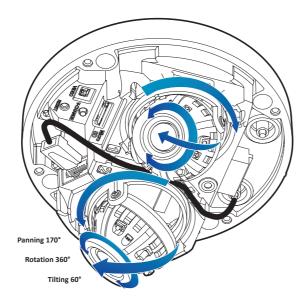

8. IP Installer

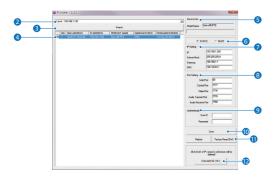

- 1. Run IP Installer
- 1 Run the IP installer in S/W folder.
- Click on Network Adaptor selection Menu (NIC) after run this program.
- 3 Select a network which a camera is connected then click on a 'Search' button. (Takes about 5 sec.)
- 4 Select a camera to set.
- 5 The information of the selected camera will be shown at Device Info.

- 8 Change the port as necessary when the network type is set to STATIC.
- A 'Port Forwarding' has to be set for external access to the camera. Refer to the manual of the network hub
- for 'Port Forwarding' settings. 1 An additional change of HTTPS, RTSP port can be done at Web Viewer >
- 9 Input ID and PW of the camera for authentication.
- Make sure to change the ID and PW for security reason.
- Go to "Web viewer>Setup>System> Users Management" for ID and PW
- The ID and PW will be set to default value when 'factory reset' the camera.
- 1 Default ID / PW : admin / admin
- Make sure to click on 'Save' button to save changed values.
- An "Apply" message will be popped-up when the settings are applied normally or an error message will be popped-up
- 1 To reboot or reset (except network setting) the camera.
 - Select a camera (multiple camera can be selected) > Input ID and PW > Click on Reboot or Factory Reset button

7. Cabling



|+|-|+|-|+|-| DC12V DI DO **(4)**

Refer to the picture below and connect the Network cable



Installation Method 2

сомоит	•	
AUDIO		
	Ų	IJ

- 1. Insert the RJ-45 cap Installer into the Lan cable
- bttom hole of the camera.
- 3. Pass LAN cable with cap installer through the hole of GROMMET
- Benting the cable can cause water leakage.



How to connect the Network Cable

A Installation Method 1



•	• • • • • • • • • • • • • • • • • • •	

- 2. Remove the Grommet blocking the
- from bottom to top.



Disposal of Old Appliance



- 1. When this crossed-out wheel bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2. All electrical and electronic products should be disposed of separately form the municipal waste stream in accordance to laws designated by the government or the local authorities.
- 3. The correct disposal of your old appliance will help prevent potential negative
- 4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

1 Network Connection **Audio Out**

crossover cable.

IEEE 802.3bt Class3

2 I/O Cable Connection

Rate Power

4 Sensor/Alarm Input (DI)

Alarm Out / Relay Out (DO)

open and normal close.

Terminal Block.

6 Audio In

3 Power Connection

leakage.

Benting the cable can cause water

Lan Cable thickness ø5.0 ~ ø8.0mm.

Please check the correct rated power.

device should connect to + and - of the

It connects to the alarm lights, siren or

lamps and the sensor types are normal

Connect the 'Audio In' port of the

or 'Line Out' port of the amplifier connected with microphone.

the microphone with the embedded

amplifier such as condenser mic.

needs to be used.

camera to the microphone directly

If the microphone is connected directly,

Connect the Straight through or Connect the 'Audio Out' port of the camera to the 'Line In' port of the

- speaker. 🔞 If the speaker without the amplifier is connected to Audio Out port, it doesn't
- the amplifier or the separate amplifier is needed. Audio Out supports only RTSP Back channel function. It plans to make it available

work properly. Therefore, the speaker with

6 SD Card Slot

on the web later.

Video Test Connector

Press and hold the video change Button for about 2 seconds to switch the 2nd video image.

Cable of the sensor/alarm input

Reset to the Factory Default Press the reset button for 5 seconds to return the setup to the factory

▼ Test Video Slot

When you connect the Test Monitor Cable to the Test Video Slot, the screen of CAM1 appears. Each time you press Video Change Button, the screen changes in order of CAM1 and CAM2.

Warning:

If you press the 'Reset' button, you will lose all setting data. If needed, please, make a note for further installation.