

2M HD IP Fixed Outdoor Flat Dome Camera

Quick Manual

Ver. 1.4 / 2022.07


Before installing and using the camera, please read this manual carefully Be sure to keep it handy for future reference.

FCC (E

ted and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules Imits are designed to provide reasonable protection against narmful interrence when the equipment is operated in a ercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in fance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a ntial area is likely to cause harmful interference in which case the userwill be required to correct the interference at his own accordance with th

To disconnect power from the mains, pull out the mains cord plug. When install the product, ensure that the plug is easily accessible.

Safety Information

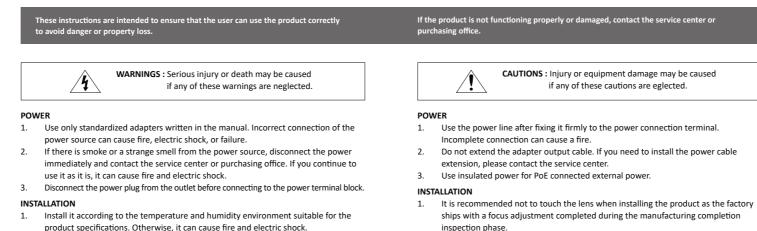

- Thunder and lightning can cause problems with the camera. When installing, be careful to minimize damage caused by lightning such as grounding.
- 3. Do not place conductive materials (drivers, coins, metal sticks, etc.) and water-filled containers on the camera. It causes injuries caused by fire, electric shock, and falling.
- 4. If you want to move the installed product, turn off the power and move it or reinstall it. Otherwise, it can cause fire and electric shock.
- Do not install it in places where there is a lot of moisture, dust, soot, etc. It causes fire and electric shock.
- 6. Avoid places where direct sunlight comes in or where heat comes out, such as heating appliances. It causes fire and electric shock

CLEANING

2.


Do not spray water directly on each part of the product when cleaning. It causes fire 1. and electric shock.

- inspection phase.
- 2. Avoid installing cameras facing bright lights like sunlight. Causes damage to the image sensor
- 3. Make sure it safe and securely when installing camera on the wall or ceilling. This can cause injury by the fall.
- 4. Do not connect multiple cameras to one adapter. Excess capacity causes abnormal heat and fire.
- Wear protective gloves when installing/uninstalling the camera. This causes burns 5. caused by high temperature on the surface of the product.
- 6. Don't drop or shock the product. Please stay away from places where vibration is severe or magnet types are present
- 7. Install it in a well-ventilated place. This can cause fire and failure.

CLEANING

Wipe the contaminated surface with a clean, soft, dry cloth or wet the soft, dry cloth 1. to prevent water from flowing, then wipe the contaminated area

1. Product & Accessories

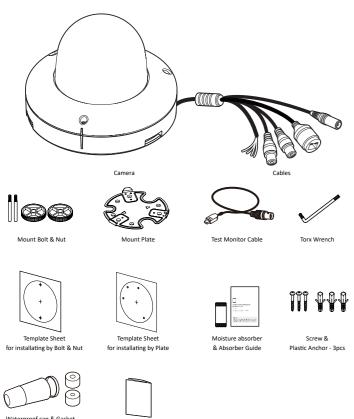


of can & Gaske Quick Mar

(Black · ø4 / White · ø5)

Xote : Cable thickness 4.5ø to 5.5ø uses a black rubber, and over 5.5ø uses a white rubber


2. Part Name

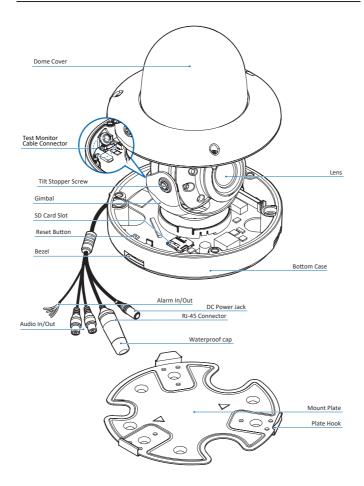


3. Disassemble the Camera

Before installing your camera, you have to read the following cautions.

- 1. You have to check whether the location can bear five times of the weight of your camera. 2. Don't let the cable to be caught in improper place or the electric line cover to be damaged. Otherwise it may cause a breakdown or fire.
- 3. When installing your camera, don't allow any person to approach the installation site. If you have any valuable things under the place, move them away.

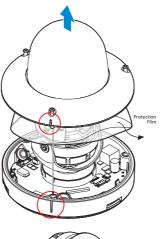

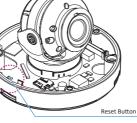

- 1 Detach the dome cover by torx wrench provided from bottom case before installation the camera
- 2 Before install the camera, remover the Protection Film.
- Be sure to assemble the dome cover and bottom case to match the case outline

Reset to the Factory Default Press the reset button for 5 seconds to return the setup to the factory default.


Warning:

If you press the 'Reset' button, you will lose all setting data. If needed, please, make a note for further installation.

Installation and Use Precautions

- The battery (battery pack or equipped battery) must not be exposed to excessive 1. heat such as sunlight, fire, etc.
- Do not disassemble the camera at your discretion. 2.
- If you forcefully install the product with excessive force, malfunction can damage 3 the camera
- Do not punch or shake the camera and be careful not to damage the camera with 4. careless storage or malfunction.
- 5. Be careful not to install the camera in a rainy or humid place, and do not leave it in a wet place.
- Installing or using the product in water can cause serious product failure. 6.
- Do not install the product if there is chemical or vapor in the place where the 7. product is installed, or if it can be generated.
- Be careful not to get chemicals on the surface of the product when installing the 8. product. Chemical solvents such as cleaning agents and adhesive components can cause fatal damage to the surface of the product.
- Do not install it near the kitchen or cooking table as edible oil such as soybean oil 9 can also cause product damage and deformation. It can cause product damage.
- 10. Be careful not to get foreign substances on the Micro SD card terminal. If there is any foreign substance, wipe it with a soft cloth.
- Data will not be saved at the end of the life of the Micro SD card. In this case, 11. purchase a new Micro SD card.
- 12. Moisture may occur in the glass of the camera when the new product box is opened (or when the product is initially running). The generated moisture is removed by a Gore vent attached to the camera within hours of the power connection.
- 13. For products enclosed with a desiccant or card-type absorbent, please install it according to the manual.
- Use only with cart, stand, tripod, bracket, or table specified 14. by the manufacturer, or sold with the apparatus.
- Unplug this apparatus when a cart is used. Use caution when 15. moving the cart/apparatus combination to avoid injury from tip-over



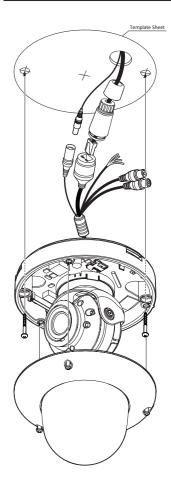


Installation

- 1 Disassemble the camera. See the section '3. Disassemble the camera' for details.
- 2 Using the template sheet, make the cabling holes on the wall/ceiling.
- 3 Connect the network cable and power cable respectively. See the section '7. Cabling' for details.
- 4 Fix the bottom case on the ceiling.
- 5 To achieve desired view direction and orientation, rotate 3-axis gimbal. To fix the setting, tighten the tilt stopper screw.



6 Assemble the dome cover to the bottom case.

5. Installation Using Mount Plate

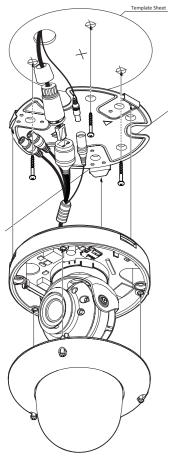

1 Disassemble the camera. See the section '3. Disassemble the camera' for details. 2 Using the template sheet, make the cabling hole on the wall/ceiling. 3 After passing the cables through the hole, fix the mount plate on the template sheet. Connect the network cable and power cable respectively. See the section '7. Cabling' for details. 5 Fix the bottom case on the mount plate. Press 3 bezels on bottom case of camera till it soundsnap to lock the camera to the mount plate. 6 To achieve desired view direction and orientation, rotate 3-axis gimbal. To fix the setting, tighten the tilt stopper screw.



Assemble the dome cover to the bottom case.

6. Installation Using Mount Bolt & Nut

- 1 Disassemble the camera. See the section '3. Disassemble the camera' for details.
- 2 Using the template sheet, make the cabling hole on the ceiling panel.
- B Insert the 2 mount holts into bottom case of camera.
- 4 Insert the mount bolts into template holes after connecting the cables.
- 6 Fix the camera by tightening mount nuts to mount bolts on the ceiling panel.




6 To achieve desired view direction and orientation, rotate 3-axis gimbal. To fix the setting, tighten the tilt stopper screw



Assemble the dome cover to the bottom case.

8. IP Installer

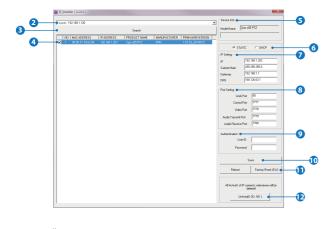

Select the network type.

-cally set the Camera IP.

DHCP mode.

The default network type of the camera is

1 If you have a DHCP server, it will automati

f If you do not have a DHCP server, Camera IP

is set to 192.168.1.80 after one minute.

1. Run IP Installer Run the IP installer in S/W folder.

- 2 Click on Network Adaptor selection Menu (NIC) after run this program.
- 3 Select a network which a camera is connected then click on a 'Search' button. (Takes about 5 sec.)
- 4 Select a camera to set.
- **5** The information of the selected camera will be shown at Device Info.

Input IP setting information when the network type is set to STATIC.

F

 Default TCP/IP information - IP: 192.168.1.80 - Subnet Mask: 255.255.255.0 - Gateway: 192.168.1.1 DNS: 168.126.63.1

8 Change the port as necessary when the network type is set to STATIC.

1 A 'Port Forwarding' has to be set for external access to the camera.

Refer to the manual of the network hub for 'Port Forwarding' settings.

1 An additional change of HTTPS, RTSP port can be done at Web Viewer >Admin page.

Input ID and PW of the camera for authentication

- Make sure to change the ID and PW for security reason. So to "Web viewer>Setup>System>
- Users Management" for ID and PW change. Mode and PW will be set to default value when 'factory reset' the camera.

1 Default ID / PW : admin / admin

10 Make sure to click on 'Save' button to

- save changed values.
- An "Apply" message will be popped-up when the settings are applied normally, or an error message will be popped-up when failed.

To reboot or reset (except network setting) the camera.

- Select a camera (multiple camera can be selected) > Input ID and PW > Click on Reboot or Factory Reset button
- Able to delete an Active-X which is installed when accessing to Web Viewer You don't need the function because this camera use the VLC plugin instead of the Active-X


🐹 Web viewer is optimized with explorer

- Live video display. This is the region for live video stream from the camera
- 2 Setup popup button. Click it to open the Setup page to setup details of IP camera like Video. Network. Events. System and etc.
- 3 When the image goes unsmoothly because of bad network connection. it stored image during setup time and shows the image on the live view screen. User will see the delayed images as much as setup time.
- 4 Channel Select button. Select a stream produced from the camera between Stream 1~3 to display it in the live view screen. ☑ Refer the 'Setup > Video & Audio > Video' to setup the Video Stream.

2. Using a Non-PoE Switch

Use a PoE-enabled switch to connect data and power through a single cable and begin viewing and recording images instantly. A non-PoE switch will require an adaptor for

> If a PoE-enabled switch is not used. use a power adaptor for power transmission and non-PoE switch for data transmission. Follow the illustrations below to connect the camera without a PoE-enabled Switch.

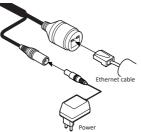



7. Cabling

power transmission

the camera.

1. Using a PoE-Enabled Switch

single Ethernet cable.

using an Ethernet cable.

The Camera is PoE-compliant, allowing

transmission of power and data via a

PoE eliminates the need for the different

cables used to power, record, or control

Follow the illustration below to connect

the camera to a PoE-enabled switch

 
Two Options

How to connect to the network through the water proof cable Insert the Lan cable into the rubber first as (a) below. Put the Lan cable into (b), then (c) will be assembled to (b) tightly. As a final step, (d) need to be assembled to (c) without making any space.

Web Viewer Screen



- 10 or above version and Chrome.






- - 6 Below "Menu" is supported in accordance with models. PTZ Control This camera model supports the zoom/focus. Speaker Control/Alarm Input/Realy Out/Mic

This feature is supported. Prese Does not support.

6 Motion. It shows the Motion event status. Event Alert Icon (🔀)appears if 'Motion etection' is activated.

Camera Time. Display the camera time.

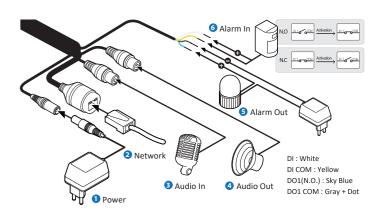

Power Connectior Please, check the voltage and current

capacity of rated power carefully.

Rated Power	Power Consumption	PoE
DC 12V	6.5W	IEEE 802.3af Class3

Network Connection

3 Audio In

Connect the 'Audio In' cable of the ca -mera to the device like microphone.

4 Audio Out

Connect the 'Audio Out' cable of the camera to device like speaker. Audio Out supports only RTSP Back channel function. It plans to make it avail-able on the web later.

6 Alarm Out

It connects to the alarm lights, siren or lamps and the sensor types are normal open and normal close. Cable of the alarm output device should connect to DO1(N.O.) and DO1 COM of the cable slot

6 Alarm In

Cable of the sensor/alarm input device should connect to Yellow and White line of the Alam cable.

Disposal of Old Appliance



- 1. When this crossed-out wheel bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2. All electrical and electronic products should be disposed of separately form the municipal waste stream in accordance to laws designated by the government or the local authorities.
- 3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.