

# 5M HD IP Door Surveillance Pinhole Camera

## Useris Manual Install Part Manual Ver. 1.0 / 2022.09

Before installing and using the camera, please read this manual carefully. Be sure to keep it handy for future reference.


# FCCC

nt has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC This equipment has been tested and found to comply with the limits for a class A algula better, pursuant to part 15 or the PCU. Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the userwill be required to correct the interference at his own expense.

To disconnect power from the mains, pull out the mains cord plug. When install the product, ensure that the plug is easily

# 1. Product & Accessories

## Please check if all the camera and accessories are included in the package.

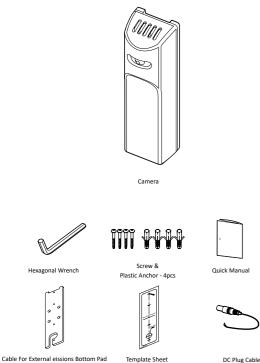



Safety Information

## These instructions are intended to ensure that the user can use the product correctly to avoid danger or property loss. If the product is not functioning properly or damaged, contact the service center or purchasing office. WARNINGS : Serious injury or death may be caused CAUTIONS : Injury or equipment damage may be caused if /4 if any of these warnings are neglected. any of these cautions are neglected. POWER POWER Use only standardized adapters written in the manual. Incorrect connection of the Use the power line after fixing it firmly to the power connection terminal. 1. 1. power source can cause fire, electric shock, or failure. Incomplete connection can cause a fire. If there is smoke or a strange smell from the power source, disconnect the power Do not extend the adapter output cable. If you need to install the power cable 2. 2. immediately and contact the service center or purchasing office. If you continue to extension, please contact the service center. use it as it is, it can cause fire and electric shock. 3. Use insulated power for PoE connected external power. Disconnect the power plug from the outlet before connecting to the power terminal 3. INSTALLATION block. It is recommended not to touch the lens when installing the product as the factory 1. INSTALLATION ships with a focus adjustment completed during the manufacturing completion 1. Install it according to the temperature and humidity environment suitable for the inspection phase product specifications. Otherwise, it can cause fire and electric shock. Avoid installing cameras facing bright lights like sunlight. Causes damage to the 2. Thunder and lightning can cause problems with the camera. When installing, be image sensor careful to minimize damage caused by lightning such as grounding.

- Make sure it safe and securely when installing camera on the wall or ceilling. This 3. can cause injury by the fall.
- Do not connect multiple cameras to one adapter. Excess capacity causes abnormal 4. heat and fire.
- Wear protective gloves when installing/uninstalling the camera. This causes burns 5. caused by high temperature on the surface of the product
- 6. Don't drop or shock the product. Please stay away from places where vibration is severe or magnet types are present.
- 7. Install it in a well-ventilated place. This can cause fire and failure. CLEANING
- Wipe the contaminated surface with a clean, soft, dry cloth or wet the soft, dry cloth 1. to prevent water from flowing, then wipe the contaminated area.

# 2. Part Name

3.


4.

5.

6.

1.

CLEANING

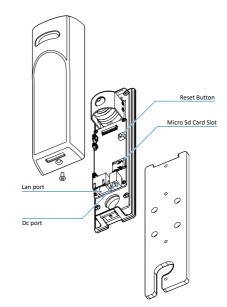

Do not place conductive materials (drivers, coins, metal sticks, etc.) and water-filled

containers on the camera. It causes injuries caused by fire, electric shock, and falling.

If you want to move the installed product, turn off the power and move it or reinstall it.

Do not install it in places where there is a lot of moisture, dust, soot, etc. It causes

Do not spray water directly on each part of the product when cleaning. It causes fire

Avoid places where direct sunlight comes in or where heat comes out, such as

Otherwise, it can cause fire and electric shock.

heating appliances. It causes fire and electric shock.


fire and electric shock.

and electric shock.

# 3. Disassemble the camera

## Before installing your camera, you have to read the following cautions.

- 1. You have to check whether the location can bear five times of the weight of your camera. 2. Don't let the cable to be caught in improper place or the electric line cover to be damaged. Otherwise it may cause a breakdown or fire.
- 3. When installing your camera, don't allow any person to approach the installation site
- If you have any valuable things under the place, move them away.

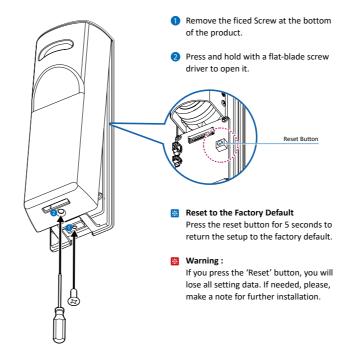


# Installation and Use Precautions

- The battery (battery pack or equipped battery) must not be exposed to excessive 1. heat such as sunlight, fire, etc.
- 2. Do not disassemble the camera at your discretion.
- If you forcefully install the product with excessive force, malfunction can damage 3 the camera
- Do not punch or shake the camera and be careful not to damage the camera with 4. careless storage or malfunction.
- Be careful not to install the camera in a rainy or humid place, and do not leave it in a wet place.
- Installing or using the product in water can cause serious product failure. 6.
- Do not install the product if there is chemical or vapor in the place where the 7. product is installed, or if it can be generated.
- Be careful not to get chemicals on the surface of the product when installing the 8 product. Chemical solvents such as cleaning agents and adhesive components can cause fatal damage to the surface of the product.
- Do not install it near the kitchen or cooking table as edible oil such as soybean oil 9 can also cause product damage and deformation. It can cause product damage.
- 10. Be careful not to get foreign substances on the Micro SD card terminal. If there is any foreign substance, wipe it with a soft cloth.
- Data will not be saved at the end of the life of the Micro SD card. In this case, 11. purchase a new Micro SD card.
- 12. Moisture may occur in the glass of the camera when the new product box is opened (or when the product is initially running). The generated moisture is removed by a Gore vent attached to the camera within hours of the power connection.
- 13. For products enclosed with a desiccant or card-type absorbent, please install it according to the manual.
- 14. Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
- Unplug this apparatus when a cart is used. Use caution when 15. moving the cart/apparatus combination to avoid injury from tip-over



# 4. Installation

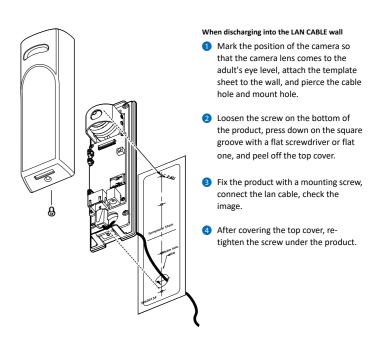

## When discharging into the LAN CABLE wall 1 Mark the position of the camera so that the camera lens comes to the adult's eye level, attach the template sheet to the wall, and pierce the cable hole and mount hole. 2 Secure the enclosed accessory PAD to the wall using the MOUNTING SCRFW 3 Loosen the screw on the bottom of the product, press down on the square groove with a flat screwdriver or flat one, and peel off the top cover. 4 Fix the product with a mounting screw, connect the lan cable, check the image. 6 After covering the top cover, re-Þ tighten the screw under the product.

# 5. Adjusting the Camera angle

## Note : After adjusting the camera lens, fasten with a hexagonal wrench.

# Title 1\* Title 1\* Title 1\* Title 1\* Title 1\*

# 8. Web Viewer Screen



- Web viewer is optimized with explorer 10 or above version and Chrome.
   Live video display. This is the region for live video stream from the camera.
- Live video display. This is the region for live video stream from the camera.
   Setup popup button. Click it to open
- the Setup page to setup details of IP camera like Video, Network, Events, System and etc.
- When the image goes unsmoothly because of bad network connection, it stored image during setup time and shows the image on the live view screen.
- User will see the delayed images as much as setup time.
- Channel Select button. Select a stream produced from the camera between Stream 1 ~ 3 to display it in the live view screen.
- Refer the 'Setup > Video & Audio > Video' to setup the Video Stream.

# 6. Cabling

## Two Options

Use a PoE-enabled swtich to connect data and power through a single cable and begin viewing and recording images instantly. A non-PoE switch will require an adaptor for power transmission.


## 1. Using a PoE-Enabled Switch

 
The Camera is PoE-compliant, allowing transmission of power and data via a single Ethernet cable. PoE eliminates the need for the different cables used to power, record, or control

## 2. Using a Non-PoE Switch If a PoE-enabled switch is not used, use a

power adaptor for power transmission and non-PoE switch for data transmission. Follow the illustrations below to connect the camera without a PoE-enabled Switch.

the camera. Follow the illustration below to connect the camera to a PoE-enabled switch using an Ethernet cable.

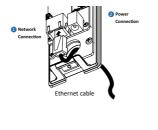



## 1 Nertwork Connection

Connect the Straight through or crossover cable.

Power Connection Please check the correct rated power.



# **Disposal of Old Appliance**



 When this crossed-out wheel bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

- All electrical and electronic products should be disposed of separately form the municipal waste stream in accordance to laws designated by the government or the local authorities.
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

## 8 Change the port as necessary when the network type is set to STATIC.

12 Able to delete an Active-X which is

Viewer.

Active-X.

installed when accessing to Web

You don't need the function because this

camera use the VLC plugin instead of the

- A 'Port Forwarding' has to be set for external access to the camera.
- Refer to the manual of the network hub for 'Port Forwarding' settings.
- An additional change of HTTPS, RTSP port can be done at Web Viewer > Admin page.

# Input ID and PW of the camera for authentication.

- Make sure to change the ID and PW for security reason.
- Go to "Web viewer>Setup>System> Users Management" for ID and PW change.
- The ID and PW will be set to default value when 'factory reset' the camera.
- Default ID / PW : admin / admin

## Make sure to click on 'Save' button to save changed values.


- An "Apply" message will be popped-up when the settings are applied normally, or an error message will be popped-up when failed.
- 1) To reboot or reset (except network setting) the camera.
- Select a camera (multiple camera can be selected) > Input ID and PW > Click on Reboot or Factory Reset button.

# S Below "Menu" is supported in accordance with models.

Does not support.
Speaker Control/Alarm Input/Relay Out
Does not support.
Preset
Does not support.

- Motion. It shows the Motion event status.
   Event Alert Icon ( ) appears if 'Motion
  - Detection' is activated.
- 7 Camera Time. Display the camera time.

# 7. IP Installer

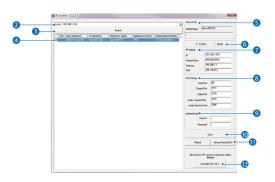

- 1. Run IP Installer
- Run the IP installer in S/W folder.
- 2 Click on Network Adaptor selection Menu (NIC) after run this program.
- Select a network which a camera is connected then click on a 'Search' button. (Takes about 5 sec.)
- 4 Select a camera to set.
- 5 The information of the selected camera will be shown at Device Info.

6 Select the network type.1 The default network type of the camera is DHCP mode.

- If you have a DHCP server, it will automatically set the Camera IP.
- If you do not have a DHCP server, Camera IP is set to 192.168.1.80 after one minute.
- Input IP setting information when the network type is set to STATIC.
- Default TCP/IP information
- IP: 192.168.1.80
- Subnet Mask: 255.255.255.0
- Gateway: 192.168.1.1
- DNS : 168.126.63.1